


## 1. PANEL MEASUREMENTS

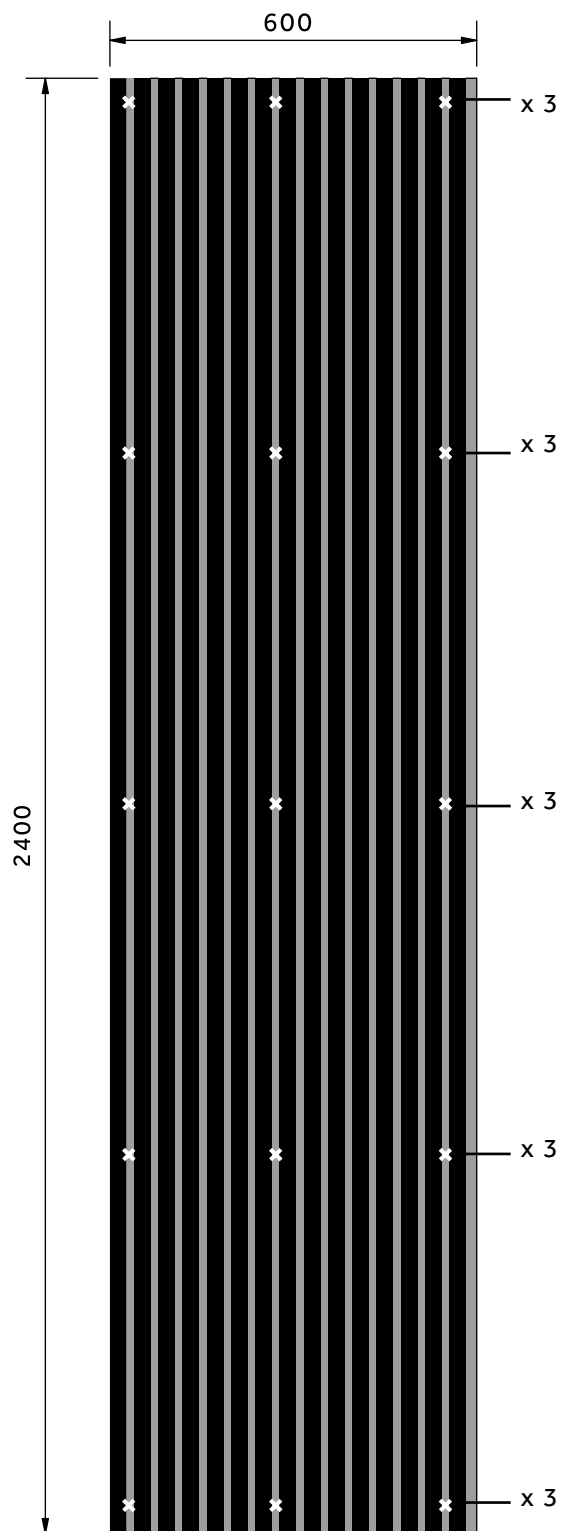

## VENTILATED INSTALLATION SOUND ABSORPTION CLASS A OR D

Lamellow Spa panels are easy to install, with screws, pins or glue, directly on an existing wall or ceiling. The installation must be ventilated with a minimum of 5mm distance to nearby surfaces such as floors, ceilings and adjacent walls. The panels must not be installed where they will be exposed to constant water or direct sunlight.

To achieve absorption class D, install directly on the wall or ceiling. To achieve absorption class A (extremely absorbent), first line the wall with 45 mm bars, 600 mm cc, and place 45 mm thick mineral wool behind the panels. The Lamellow Spa panel does not provide a waterproof layer.

### INSTALLATION

Use mounting method adapted to the substrate and area of use for the panel.



The panels must be fastened with a minimum of 15 fastening points per panel in the felt between the ribs (1) (2) to obtain discreet installation.

### WALL INSTALLATION

#### ADHESIVE:


It is possible to glue the panel directly to the wall. Use MS polymer glue. Fix the panel while the glue hardens.

### VENTILATED INSTALLATION

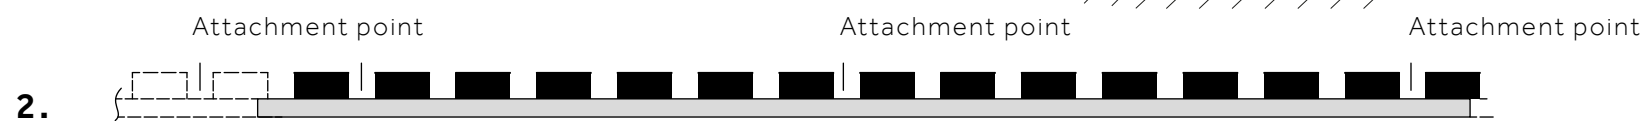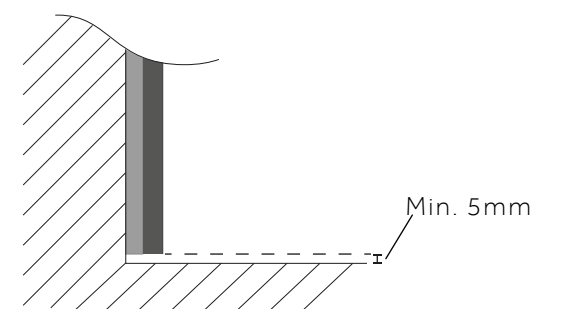

### JOINTS


Concealed joint due to over lapping the panels (2) (3)

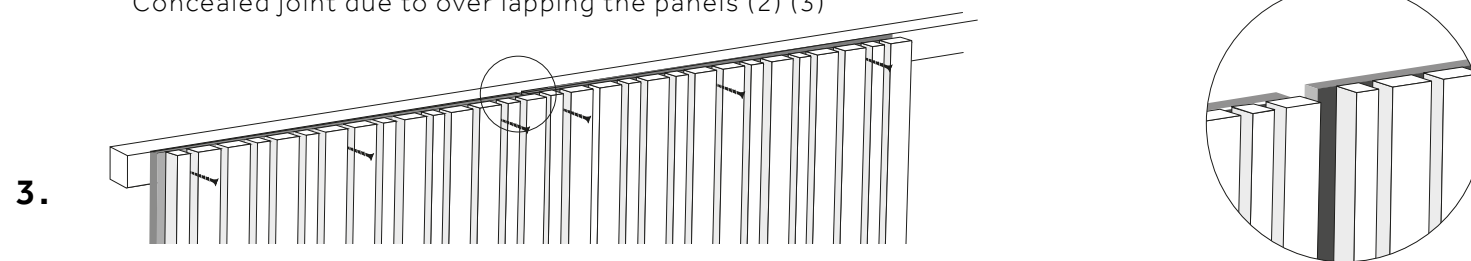


### FRAMING PROFILE

The framing profile can be used both on the sides and at the top of the panel installation.

#### PLACED ON THE SIDES

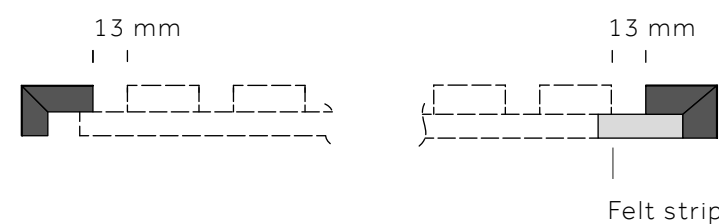

#### PLACED ON TOP


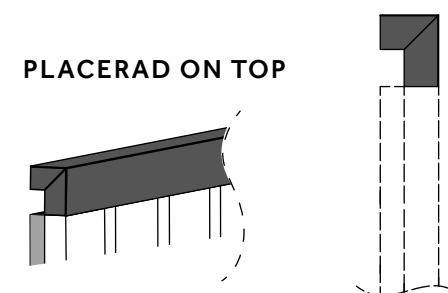


## YOU MIGHT NEED

- Saw with sharp blade, preferably circular saw or joint tail.
- Screwdriver
- Spirit level
- Meterstock
- Carpet knife
- Sealing joint

### For sound absorption class A

- 45mm battens
- Screws to the battens
- Mineral wool (45 mm)

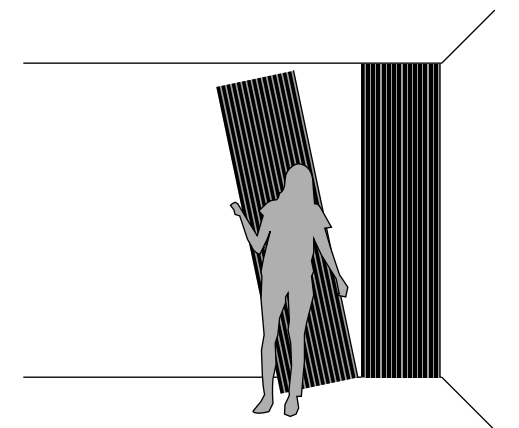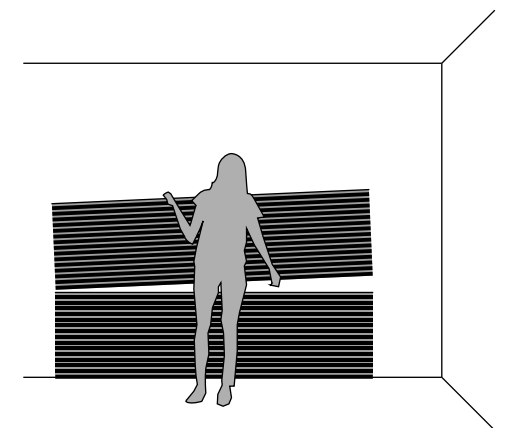

## CARE AND MAINTENANCE

### WOOD

Wood is a natural product and each wood veneer is unique. Variation in colour, pattern and texture is a natural part of the look. Wood changes over time when exposed to light.

### STORAGE, USE AND INSTALLATION CONDITIONS

- -20C° till +100C° och i en relativ luftfuktighet på 100%
- The panels should be stored horizontally before installation.
- When installing outdoors, the panel must be placed under a roof and must not be exposed to constant moisture or direct sunlight.

### CLEANING

Cleaning is performed with a dry mop or vacuum cleaner. On other stains, use a synthetic detergent without ammonia and sponge with fresh water afterwards.